



**Instruction Manual** 




WWW.af-model.com billxiao@af-model.com









## **Assembly**

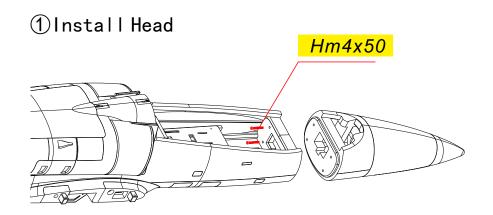

# ②Install Cabin

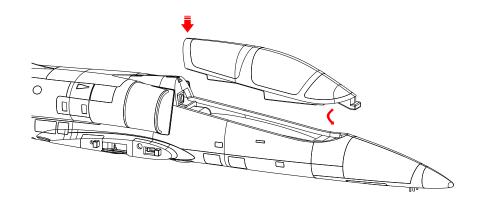


#### **Box Contents**

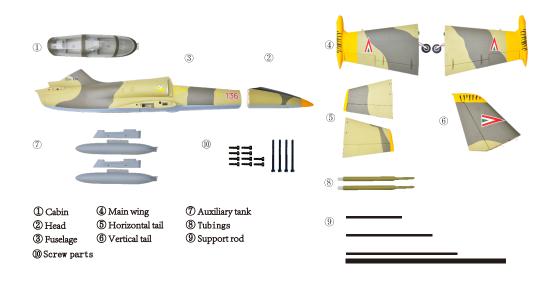

### **Specifications**

	6-8 Kg	PZP
	12g x 6pcs (Control-Cover/Turn) 25g x 7pcs (Control-Main wing/Vercital tail/Horizontal tail)	Installed
	Main Tank 1600CC	Installed
Battery	3S 2200 mAh High Discharge Li-PO Battery	Installed
Kg	7.3Kg(No Fuel)	PNP

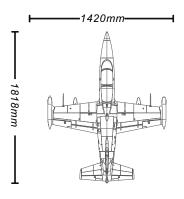








#### **CG LOCATION**

Make sure the center of gravity(CG) is as indicated in the following diagram.

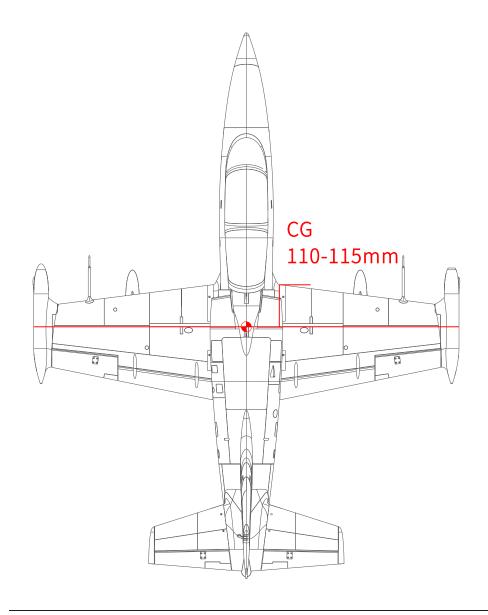

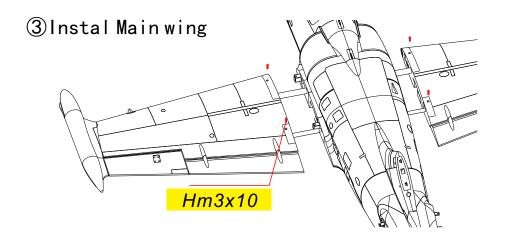

4Instal Auxiliary tank

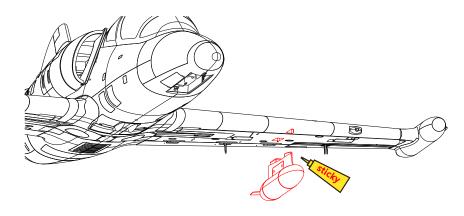


5 2






⑤Instal Tubings

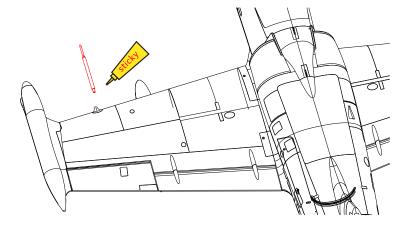


⑥Instal Horizontal tail

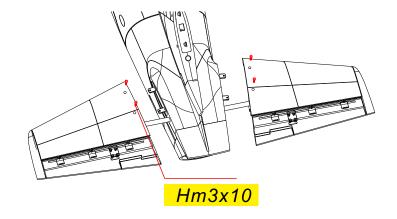


3

7 Instal Verical tail

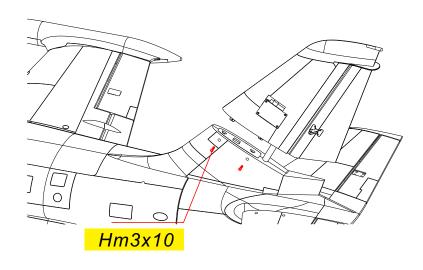

①Instal Baffle

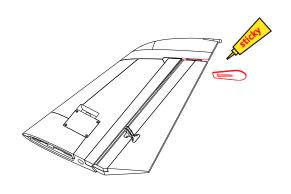

4